
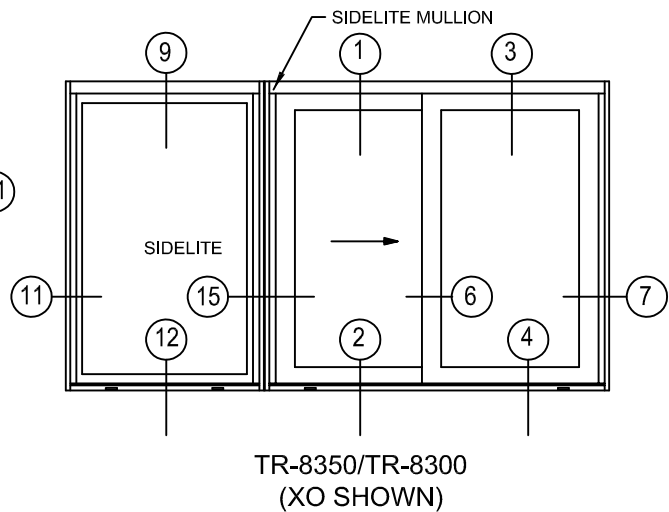
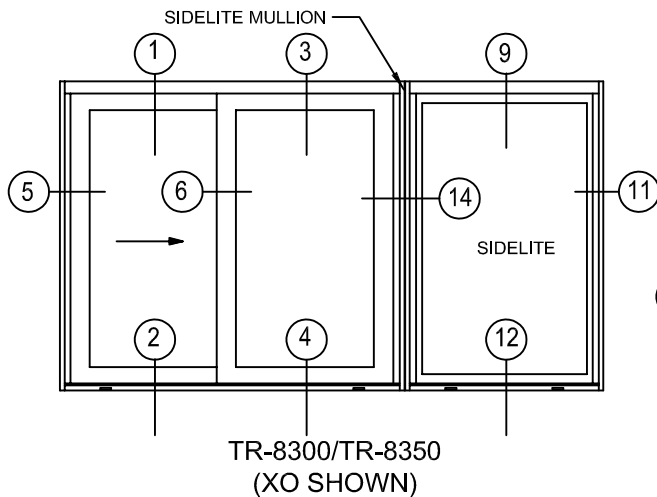
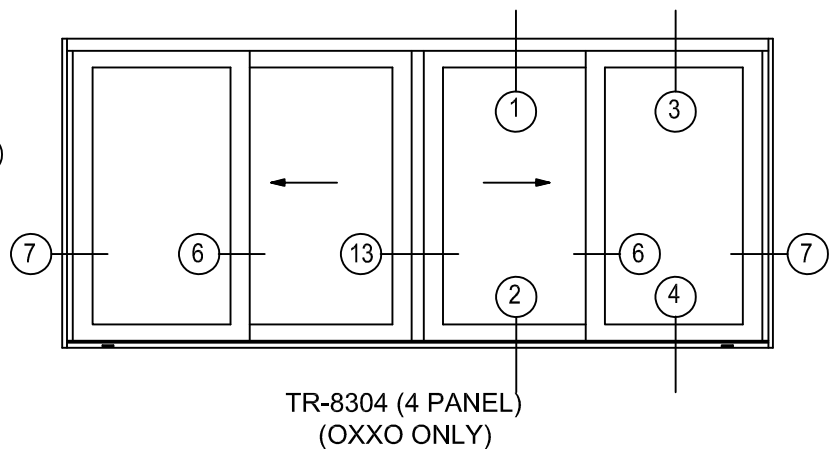
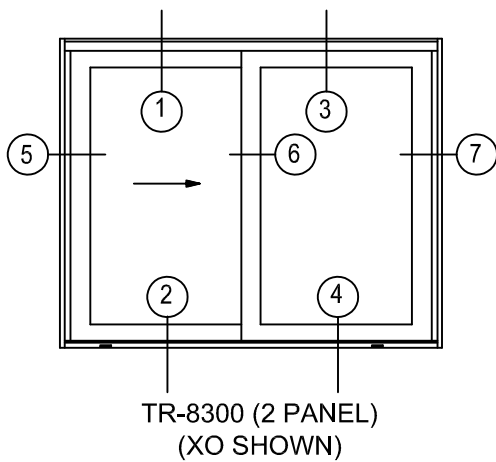
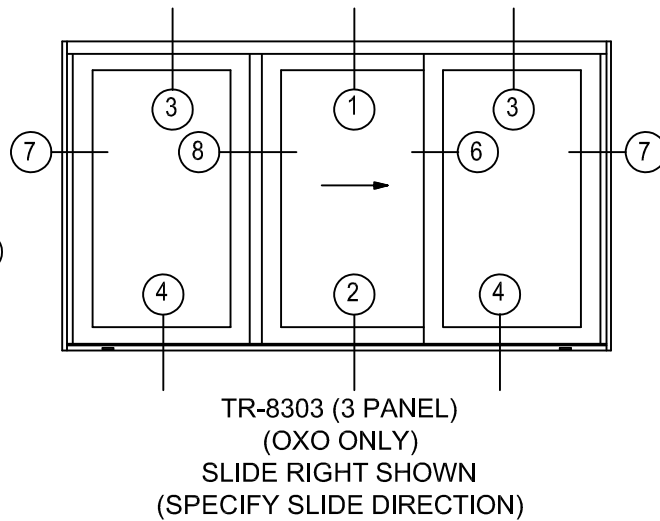
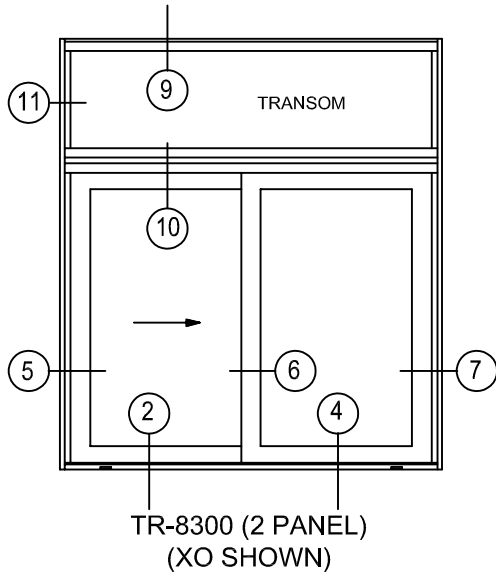



## ELEVATIONS

SERIES TR-8300  
SLIDING GLASS DOOR


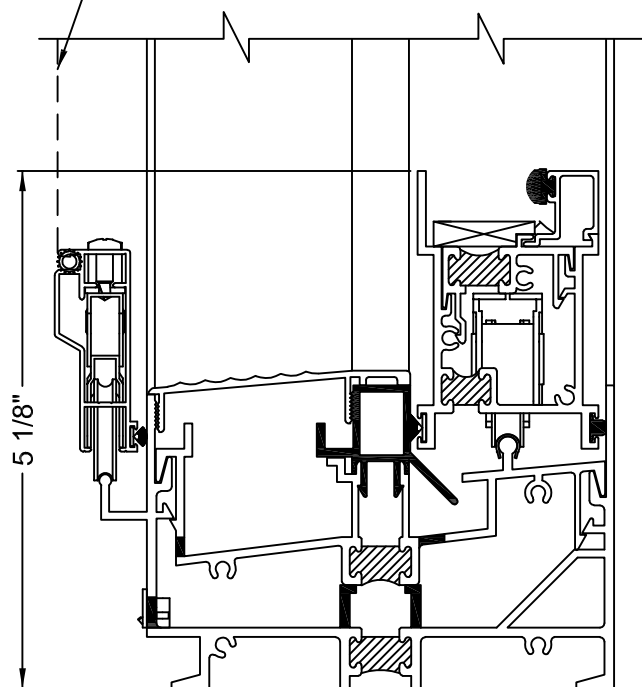
Half Scale Sections

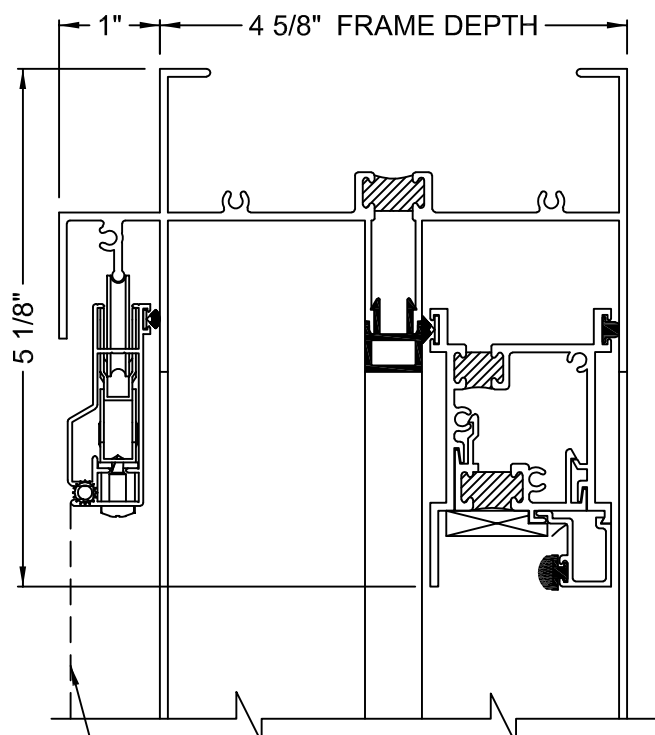


① OPERATING HEAD

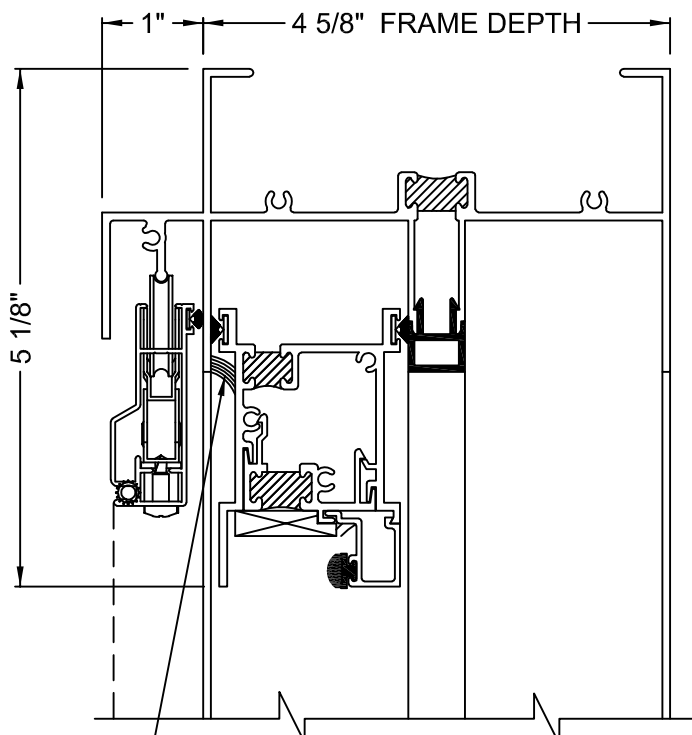

③ FIXED HEAD




② OPERATING SILL

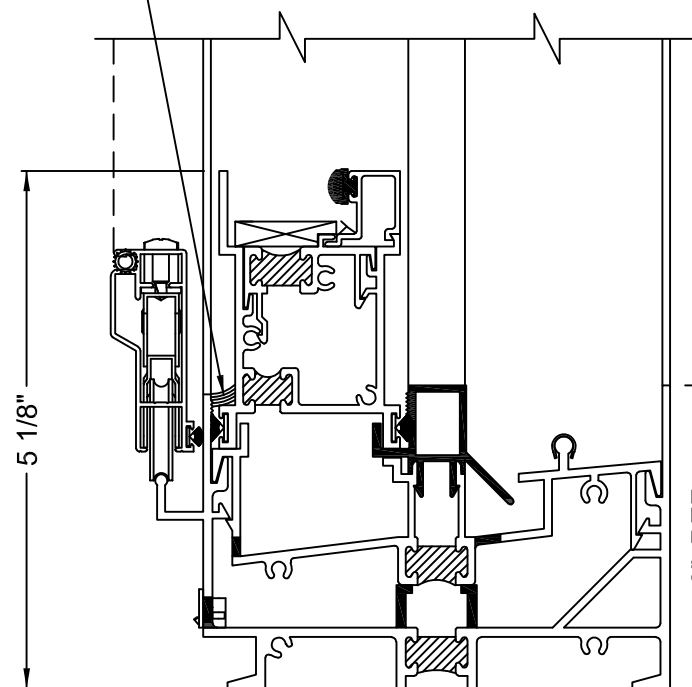




④ FIXED SILL

STANDARD 10 PSF SILL SHOWN  
REFER TO PAGE 5 OF 8 FOR OPTIONAL SILLS


Half Scale Sections

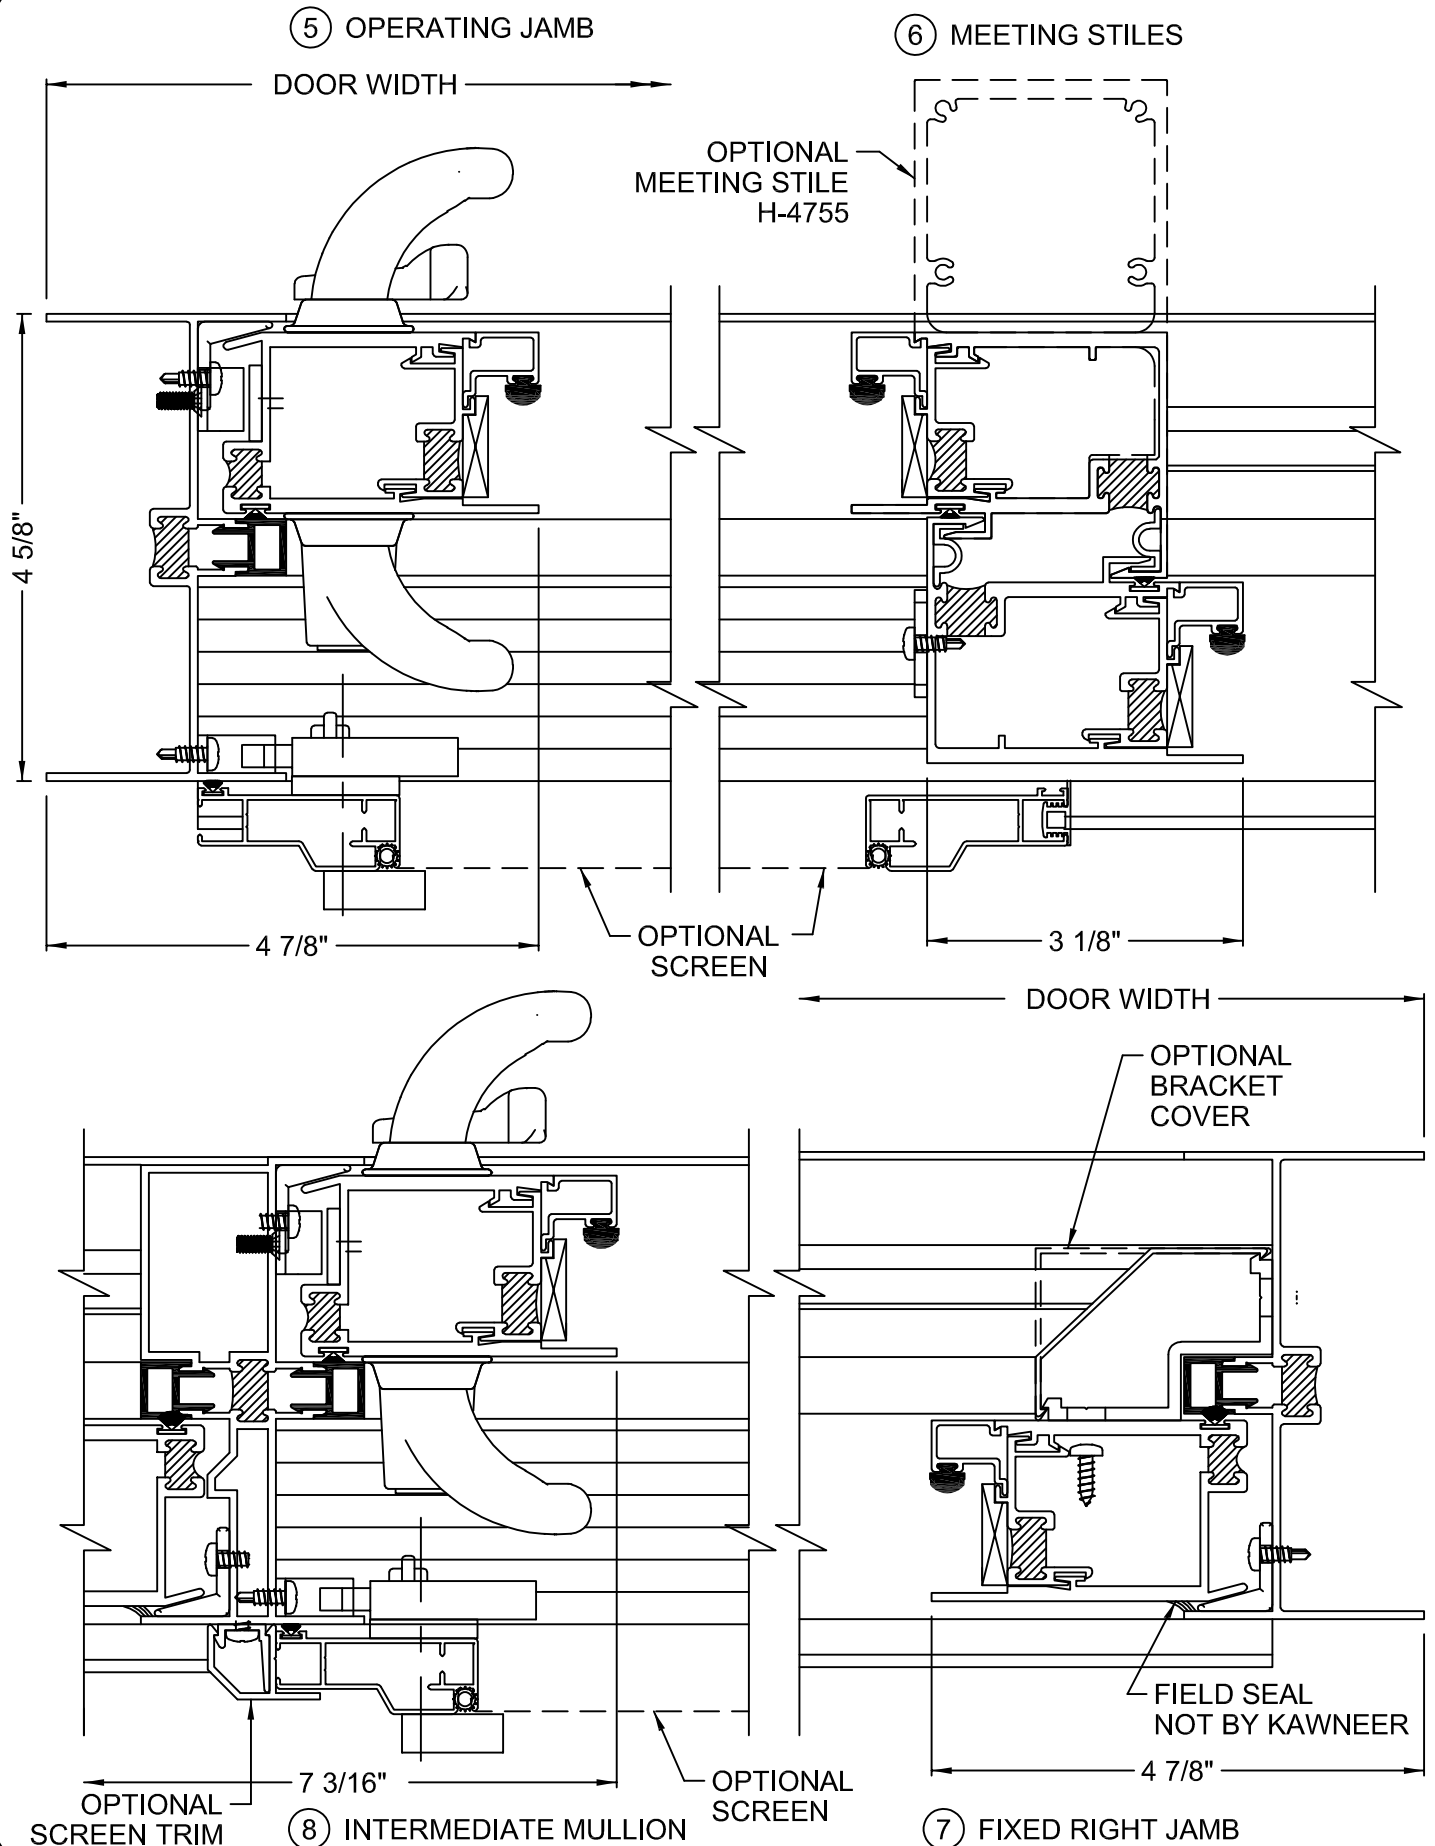


Half Scale Sections

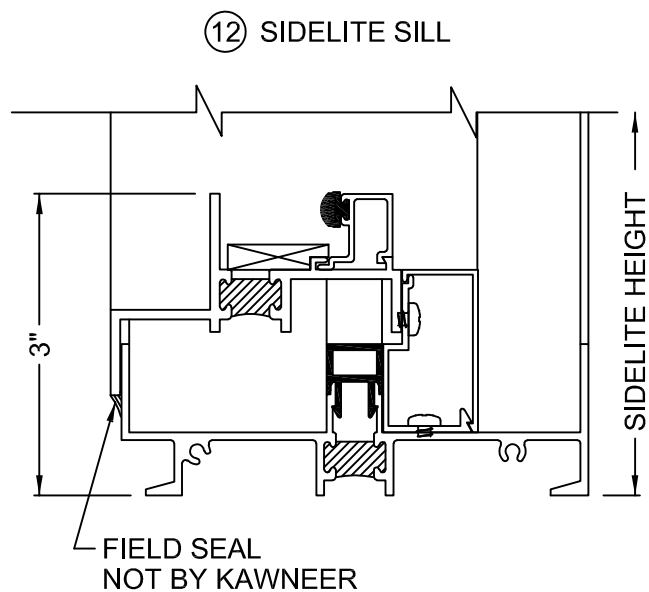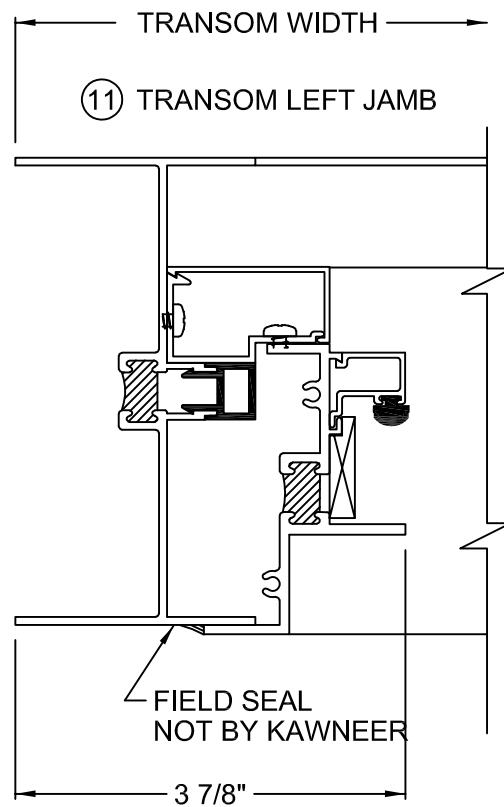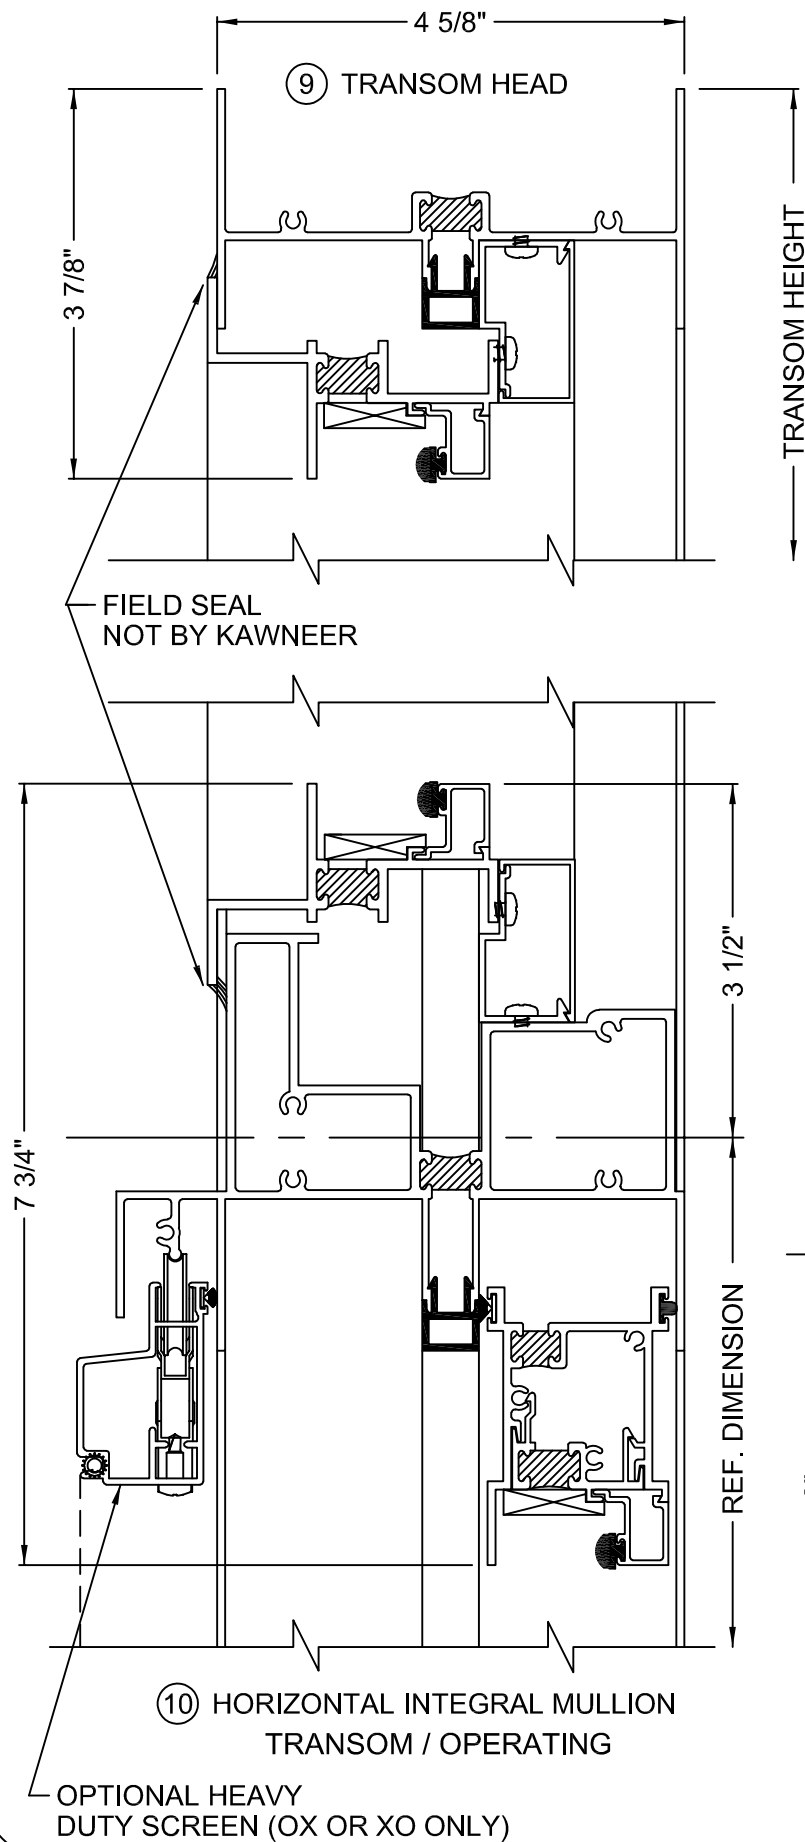


Half Scale Sections

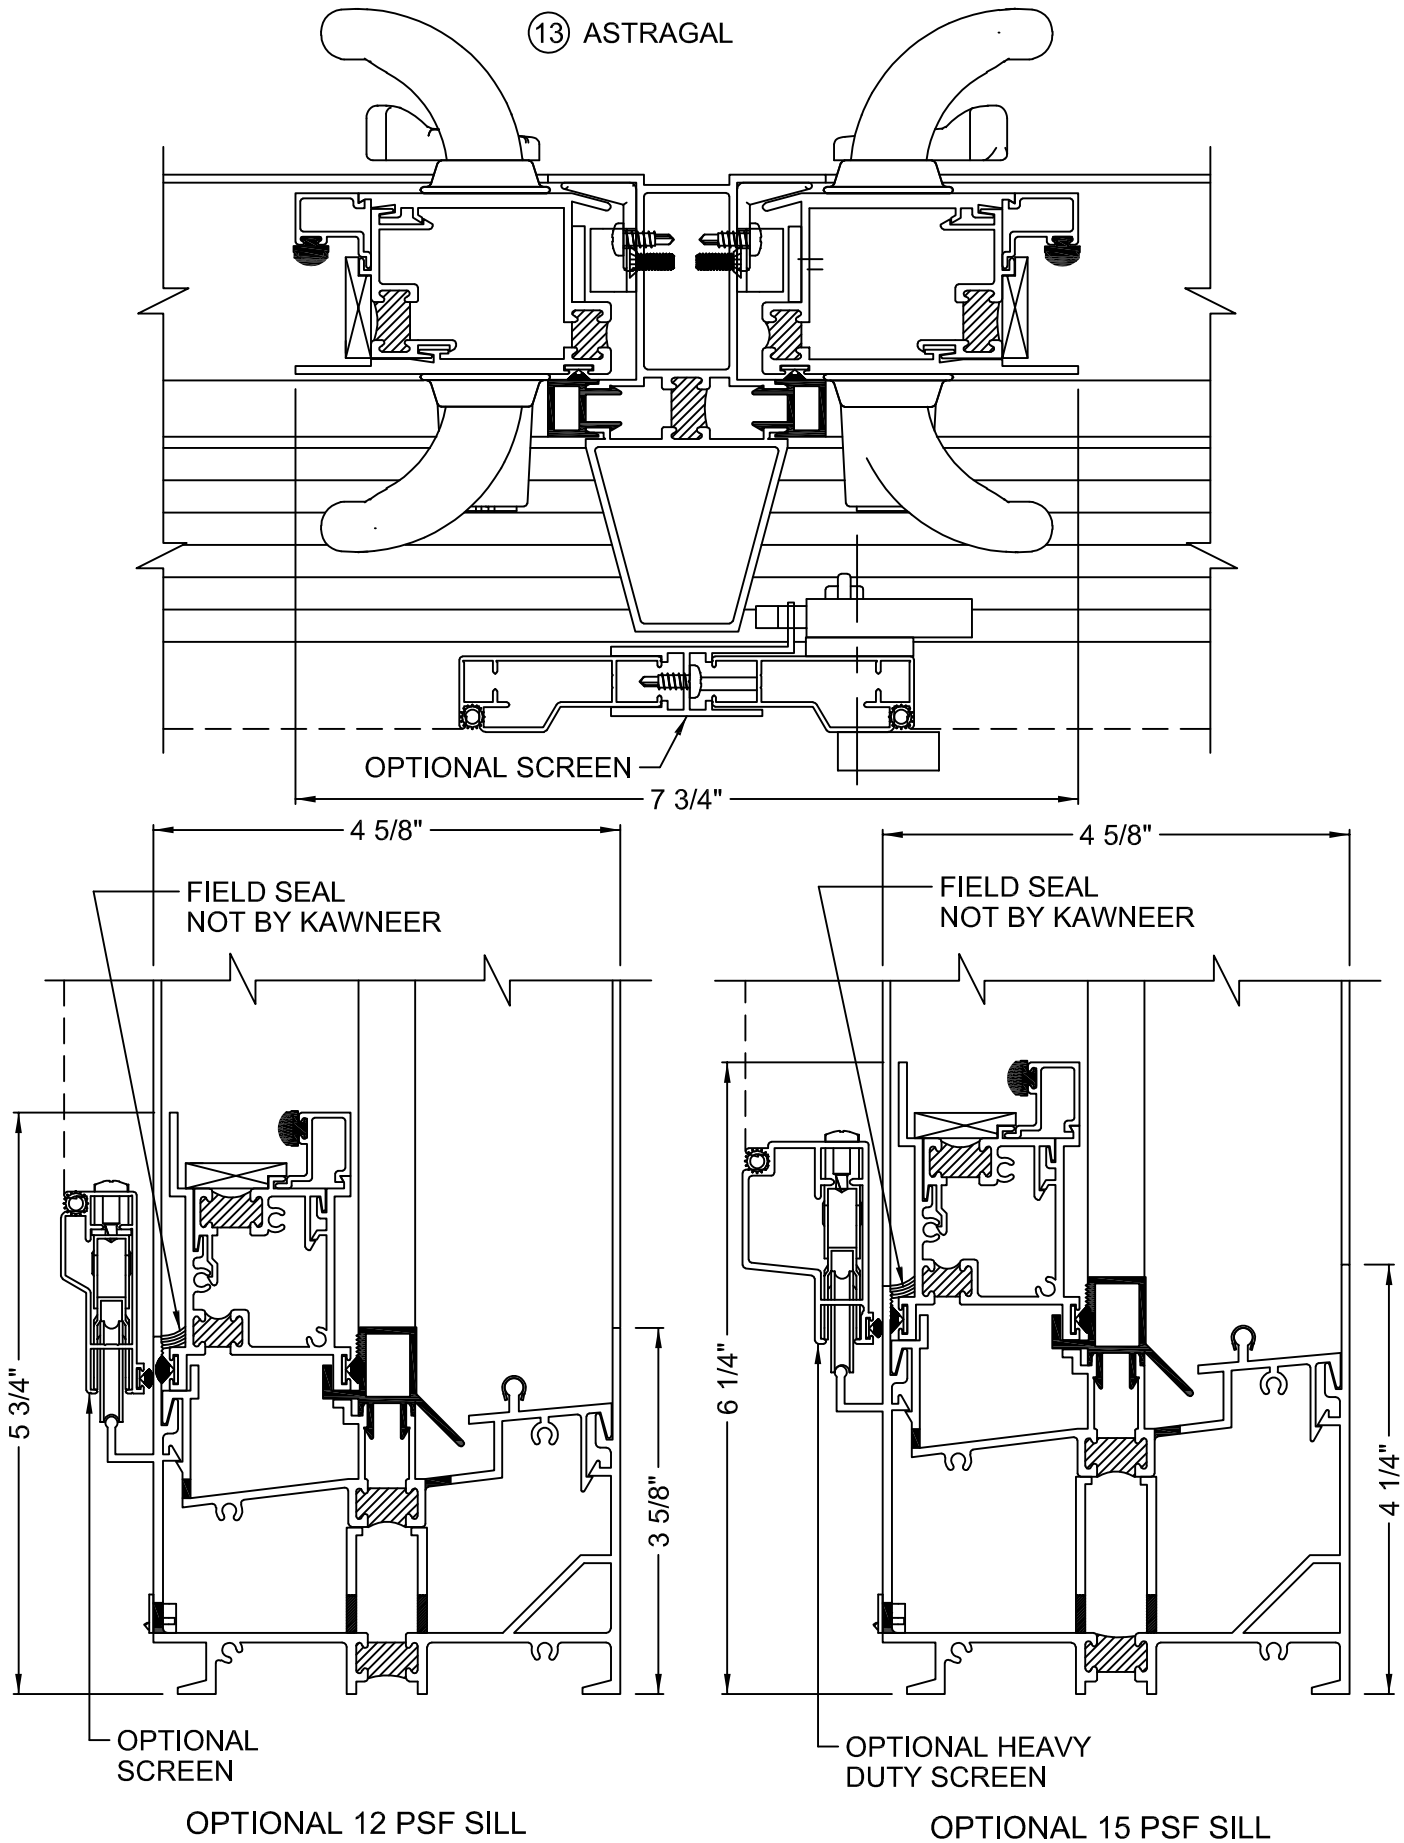

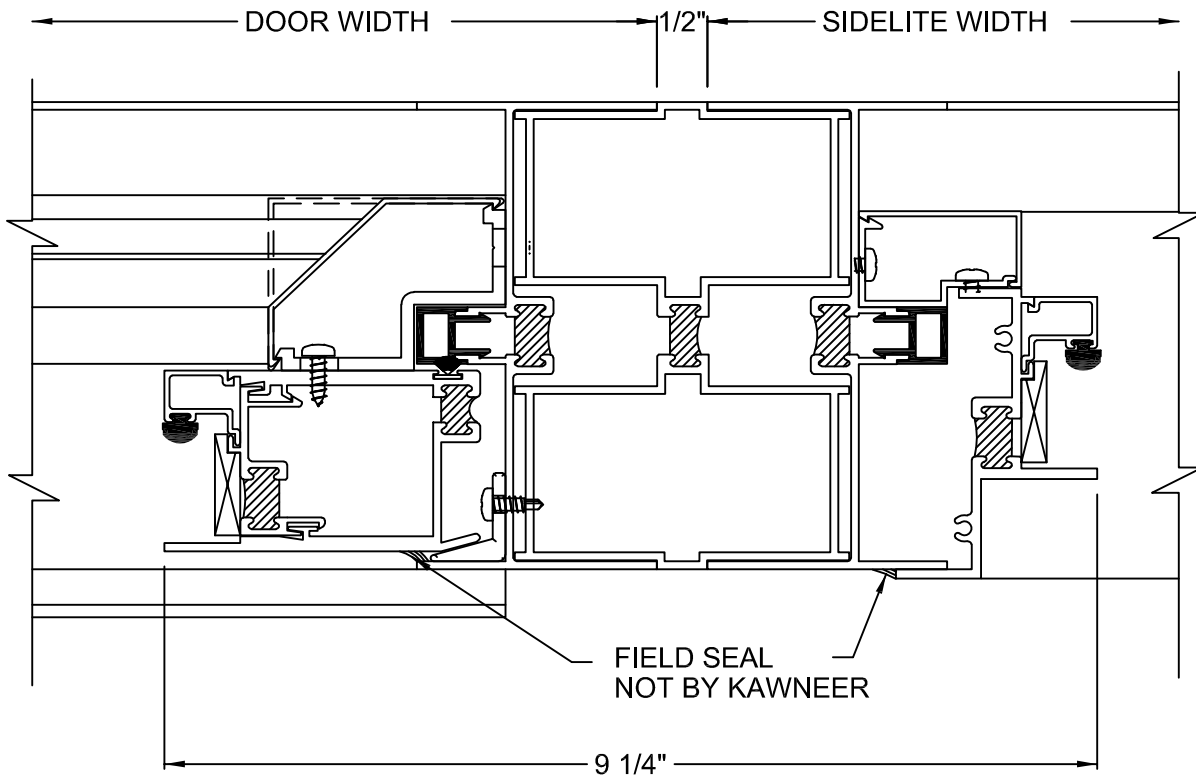

⑭ VERTICAL MULLION (FIXED/SIDELITE)

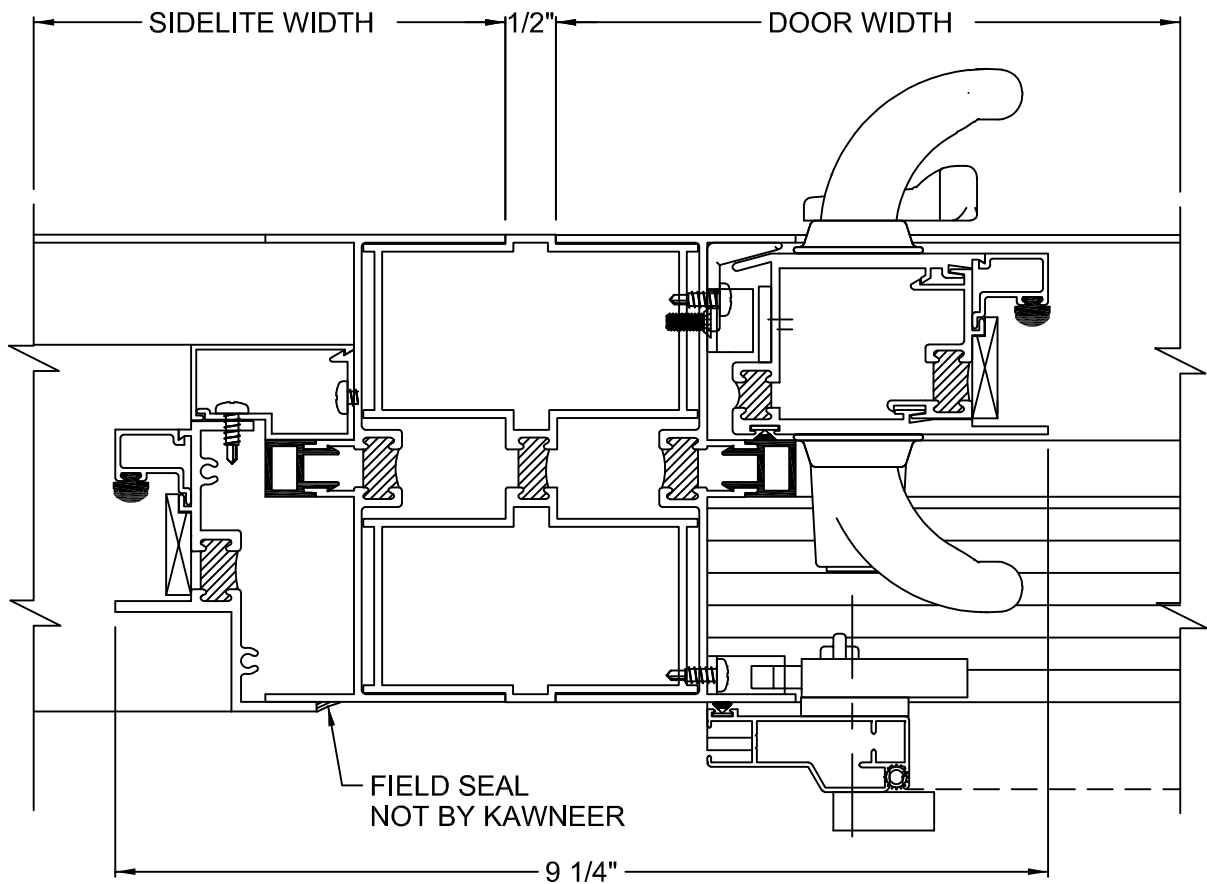

## Handling Guidelines

**Door Installation**

1. Refer to the TR-8300 Assembly and Installation Instructions in each frame package.
- Door frames are supplied “KD” (*knocked down*) for field assembly and field sealing
  - Operating (“X”) and fixed (“O”) panels, and optional screens are factory-glazed.
  - Door locking hardware is supplied in a kit to be field assembly onto door panels and frame.
  - Doors shall be installed square, plumb, and level without binding.
  - Insulation should be inserted between the door frame and the opening.
  - Refer to the approved shop drawings for blocking, anchor, and sealant details.
  - Refer to the sealant manufacturer’s guidelines for sealant selection and application.
  - Adjust hardware, if required, after operating panels are in frame and wheels are adjusted.
  - Verify that the weep hole covers are working properly and not covered with sealant.

**Operation/Reglazing**

- **To Unlock Panel:** Unlatch the jamb plunger to unlock the panel and while holding handle, slide the panel to the open position desired. To close panel, slide to closed position and re-engage plunger.
- **To Remove Panel:** Open operating panel, withdraw wheels into panel sill rail, raise panel into head pocket, and remove operating panel to interior. Remove threshold, remove screws from exterior angles holding fixed panel, remove cover and screws from interior jamb brackets, raise fixed panel into head pocket, and remove fixed panel to exterior. Store panels upside down to avoid wheel or wheel housing damage.
- **To Reglaze Panel:** Remove the four interior aluminum glazing beads. Carefully remove the glass from the exterior glazing tape. Replace glazing tape and reverse procedure to reglaze glass.
- **To Adjust Panel Rolling:** Locate screws in concealed holes on the interior face of the operating panel and raise/lower wheels by turning screw.

**Maintenance**

Your new door will last for many years with a minimum of maintenance and routine care when this schedule is followed:

- **Every Three Months:** Vacuum the door frame sill to remove debris, dirt or foreign matter which may have accumulated and clogged the weep (water drainage) slots. Inspect for broken or missing parts and weatherstripping.
- **Every Six Months:** Clean the door frame, sill and jambs to remove any buildup, dirt sludge or grime which may interfere with the roller system.
- **Once Per Year:** Lubricate the rollers and locking mechanisms with silicone spray or lubricant to ease operation and reduce excessive friction. Inspect all working components for excessive wear or breakage.

Contact your nearest KAWNEER dealer for replacement parts as required.

Hardware

The Warranty Label provides important information:

|                                  |                       |                  |            |
|----------------------------------|-----------------------|------------------|------------|
| Order #                          | 712070                | 04/11/05         | Order Date |
| Model #                          | TR9000 B3 B3          | OBDS A ,CLDS A   | Glass Type |
| Window Size                      | SIZE 48 X 95          | 60.1006, 60.0001 |            |
| Glass Size                       | GLASS 42 5/8 X 44 3/8 |                  |            |
| ** WARRANTY *** DO NOT REMOVE ** |                       |                  |            |

The Warranty Label is located on the outside top of the door rail.

When ordering parts, please provide Order # from Warranty Label (above), Part #, and Part Name.


Black Lock Handle (Standard)  
#30-3490.16

Lock #30-3306


Lock Screws #15-0192

Keeper #30-2525

Keeper Screws #15-0129

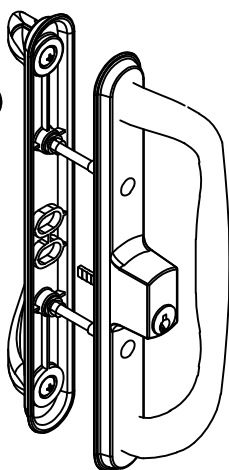


Optional Handles Available  
Contact Your Kawneer Representative

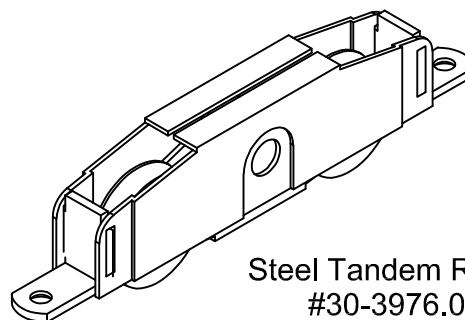

Steel Tandem Roller  
#30-3976.00

Screws  
#15-0192

 
Optional Stainless Steel Tandem Roller  
#30-3976.02




Weep Cover  
Black #30-3886.16  
White #30-3886.10



 
SS Roller Track  
8 Feet #30-0338  
10 Feet #30-0339



Roller Hole Plug  
Black #30-0341  
White #30-0340

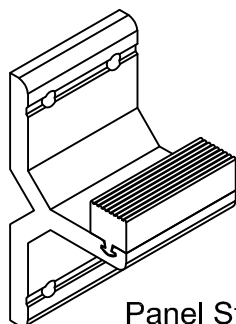


Panel Stop  
#50-0321

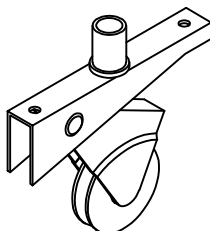

Steel Screen  
Roller  
#30-0782

 Optional SS Screen Roller  
#30-3081



Screen Bug Flap  
#20-0276  
-specify length